

This article is available online at:

<http://www.cybernetman.com//kb/index.cfm/fuseaction/home.viewArticles/articleId/11>

How do I clear the CMOS on the i-945 and iOne-GX45?

Cause - Possible CMOS corruption

1. To clear the CMOS on the i-945 and/or iOne-GX45 LCD-PC, first power down the machine.
2. Then unplug the AC adapter from both the power source and the system.
3. Locate the CMOS micro switch underneath the LCD panel, which is located next to the sound ports and is labeled CMOS. Use a paperclip or something similar to press the switch, holding it down for a moment or two.
4. Release the paperclip and plug the AC Adapter into the PC, then connect the power source to the AC Adapter.
5. Press the power button to turn on the PC; immediately following, begin to repeatedly press the Delete key on the keyboard to enter the CMOS Setup Utility.
6. Use the keyboard to navigate the cursor to Load Optimized Defaults, then press enter (choose Yes if prompted).
7. Once done, press F10 to save changes and exit.

The PC will now reboot and load the installed Operating System.