

This article is available online at:

<http://www.cybernetman.com//kb/index.cfm/fuseaction/home.viewArticles/articleId/194>

How do I Change the Boot-Up NUMLOCK status?

Note - The CMOS Setup Utility provides access to various system functions; changing system settings is recommend for advanced users.

1. To change the NUMLOCK status at power on, first access the CMOS Setup Utility by repeatedly pressing the delete key immediately upon powering the unit.
2. After the splash screen disappears, the CMOS SETUP UTILITY will appear.
3. Select Advanced BIOS Features from the main menu screen.
4. Highlight Boot Up NumLock Status and set it to ON or OFF based on personal preference, then press F10 to save changes and exit the CMOS Setup Utility.