

This article is available online at:

<http://www.cybernetman.com//kb/index.cfm/fuseaction/home.viewArticles/articleId/196>

How do I clear the CMOS on the ZPC-GX31?

1. Power down the machine and unplug the AC adapter from the wall so no power is supplied to either.
2. Locate the CMOS micro switch beneath the optical drive; of the two holes it is the one closest to the back of the unit.
3. Use a paperclip or something similar to press that switch to clear the CMOS.
4. Return power to the AC Adapter and turn the PC on.
5. If the CMOS was cleared correctly, shortly after the splash screen disappears two options will present themselves - Press F1 to run setup and Press F2 to load default values. Press F1 to enter the CMOS Setup Utility.
6. Once the CMOS menu appears, Load Optimal Defaults by pressing F9.
7. Once you've done that, press F10 to save and exit. The computer will then reboot and load the installed Operating System.

Related support video:

Advertisement