

This article is available online at:

<http://www.cybernetman.com//kb/index.cfm/fuseaction/home.viewArticles/articleId/35>

How do I clear the CMOS on the Elite 4?

Cause - Unable to bootup the system due to a forgotten password, an incorrect CPU clock setup, CMOS data corruption, or the need to reset the CMOS settings to default values after the system BIOS has been updated

1. Power off the system and disconnect the power cable.
2. Open unit and locate the jumper labeled JP4 (See picture from attachment below).
3. Remove the shunt from pin 2 and 3 and place it on pin 1 and pin 2 for five seconds, then place the shunt back on pin 2 and pin 3 of JP4.