

This article is available online at:

<http://www.cybernetman.com//kb/index.cfm/fuseaction/home.viewArticles/articleId/47>

How do I replace the CMOS Battery in my Elite ZPC?

Cause - CMOS battery has gone bad

1. To replace the CMOS battery in the Elite ZPC, first be sure all power is removed from the unit.
2. Then carefully remove the screws on the back underside, right above the ports, to remove the keytop.
3. Once the unit is open, simply remove the bad battery and replace it with the new one.
4. Be sure to reset the CMOS by following the directions in the related article.
5. Once done, boot up the machine and hold the delete key to enter the CMOS Menu.
6. Choose to Load Optimized Defaults, then save and exit.

The PC should boot up normally.