

This article is available online at:

<http://www.cybernetman.com//kb/index.cfm/fuseaction/home.viewArticles/articleId/80>

How do I enter the CMOS/BIOS Setup Utility?

To enter the CMOS/BIOS setup utility, power on the unit and begin to repeatedly press the delete key until the CMOS Setup Utility appears.